

Thank you for purchasing your new SOLO WERKS S1 Coilover suspension.

IMPORTANT

**DO NOT USE POWERTOOLS ON SHOCK SHAFTS WHEN INSTALLING -
WARRANTY WILL BE VOID.**

USE ALLEN KEYS ON ALL SHOCK SHAFTS WHEN INSTALLING

SOLO WERKS recommends that you have this kit installed by a qualified professional. Solo Werks or its authorized agents are not responsible for damage or failure resulting from an improper or modified installation.

All suspension-related components must be inspected and in good working condition. You should inspect all bushings, tie rods, hubs, bearings, strut mounts, sway bar end links, wheels, tires, etc. and replace them if necessary.

This suspension system was designed to work best with the factory wheel/tire combination. Any deviations from these specifications could result in significantly altered handling characteristics and/or increased interference risk to other vehicle components.

SOLO WERKS TIP: *Depending on the offset & size your wheels/tires, wheel spacers may be required for proper fitment.*


If suspension is lowered past the recommended measurements there can be possible interference with multiple vehicle components; (i.e. modification may be necessary to fender lips, seams etc...). This will also void your Solo Werks warranty.

After installing the suspension system, a four-wheel alignment must be performed according to manufacturer's specifications. Check and reset load- dependent brake compensator, ABS system and headlight aim according to manufacturer's specifications (If applicable).

ALL RUBBER- MOUNTED STRUT/ DAMPER ATTACHMENTS MUST NOT BE FULLY TIGHTENED UNTIL **AFTER THE SUSPENSION SYSTEM IS LOADED** (WHEELS ON THE GROUND). OTHER MOUNTING FASTENERS (FOR EXAMPLE BRACKETS) MUST BE SECURELY TIGHTENED BEFORE LOAD IS PLACED ON THE SUSPENSION SYSTEM

Every effort has been made to avoid printing errors in our literature. However, if there are any application or specification errors or omissions we must disclaim responsibility.

Solo Werks Coilover Pre Assembly – Priming the Dampers

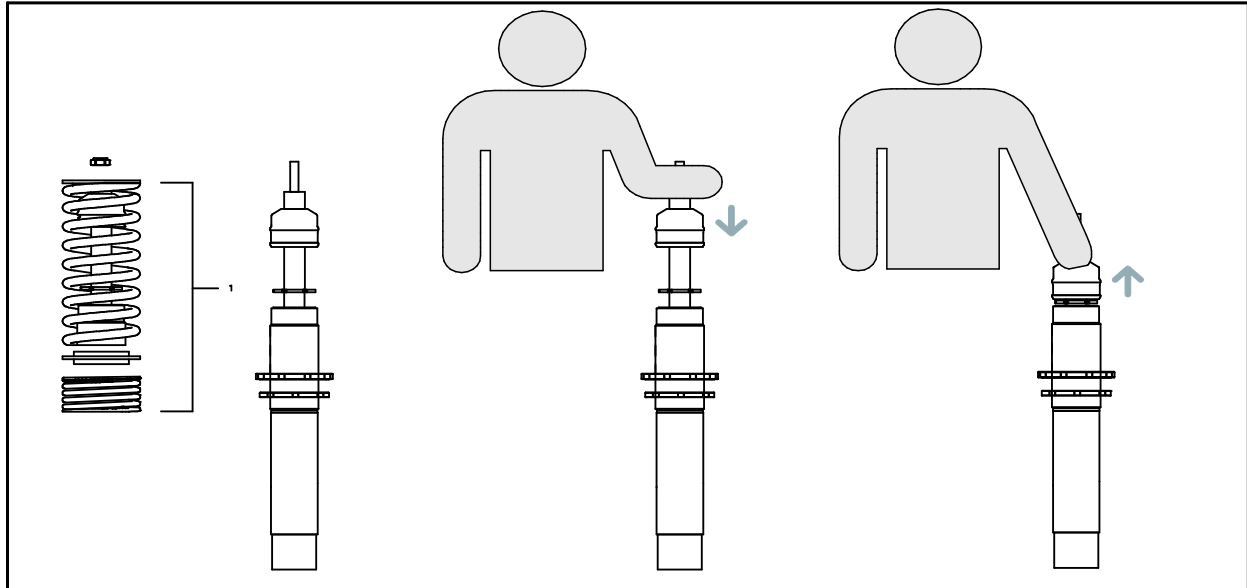

SOLO WERKS TIP: As the suspension is shipped and stored in a horizontal position, it is advisable to exercise or Prime the shock absorber before you install them to ensure that the internal contents are in the correct chambers. Therefore, we advise that before you assemble the coilover shock absorber, take a moment to purge the shock absorber.

To do this, one side at a time remove the following from one of the Coilover Assemblies (if equipped):


- Upper fasteners* (lock nut and securing nut – model dependent)
- Upper Spring Perch
- Main Spring
- Spring Isolator
- Helper Spring

You will then be left with the coilover strut with the bumpstop and vent disc on the shaft. Pull the bumpstop up to the top of the chrome shock shaft, just before the threaded portion.

With the shock upright (as it would be installed in the vehicle) compress the shock shaft until the bump stop touches the shock housing, and then pull to extend the shock shaft back to full extension.

Repeat 3-5 times minimum. You will notice the shock forces getting progressively harder each time. Once they feel consistent each way, you are ready to install.


Complete Kit

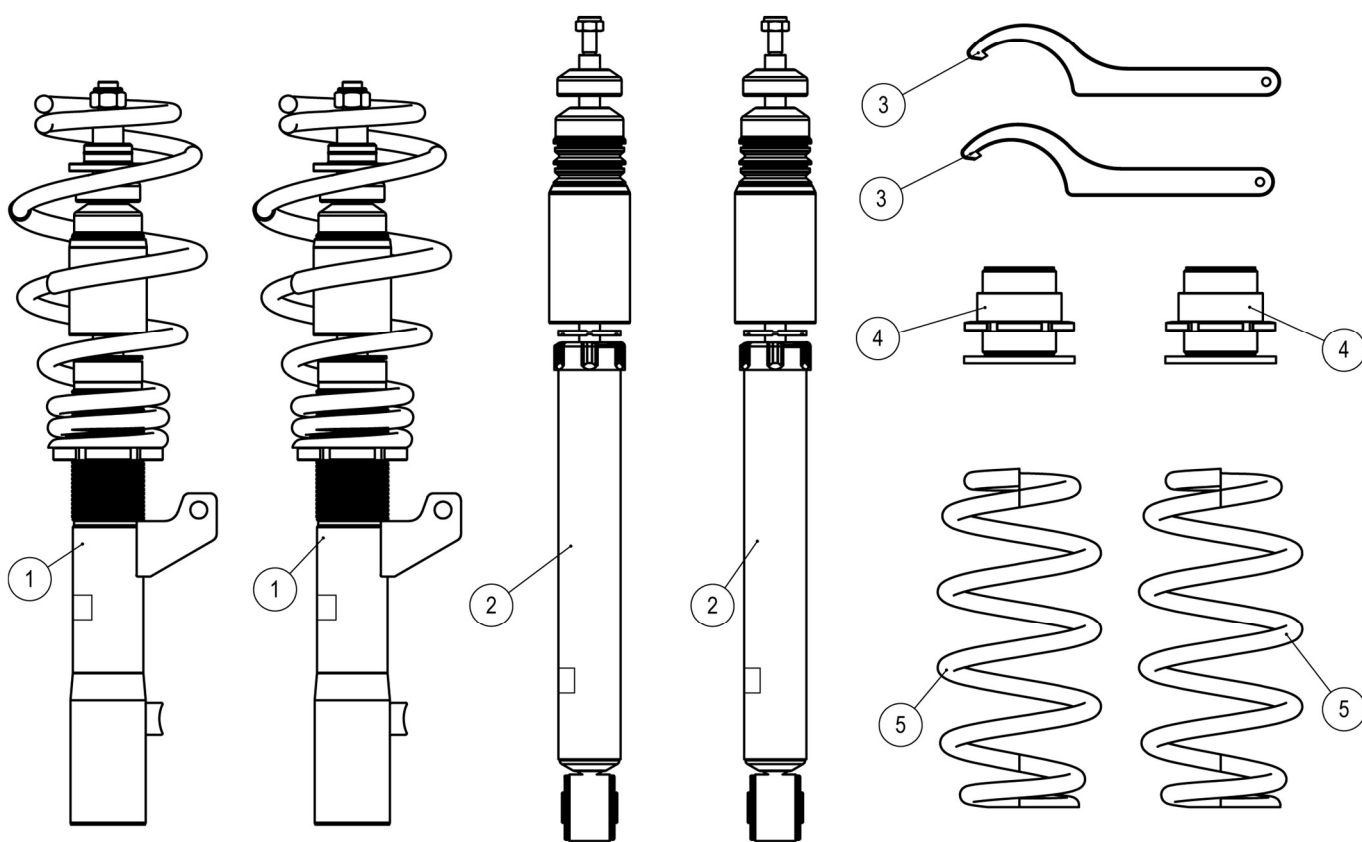

N.o	Part No.	Description	Quantity
1	801300	Strut Housing Front Assembly	2
2	800740	Rear Shock	2
3	700006	Spanner Wrench	2
4	700001	Height Adjuster	2
5	800750/801310	Rear Spring*	2

* varies depending on main part number


Figure 1

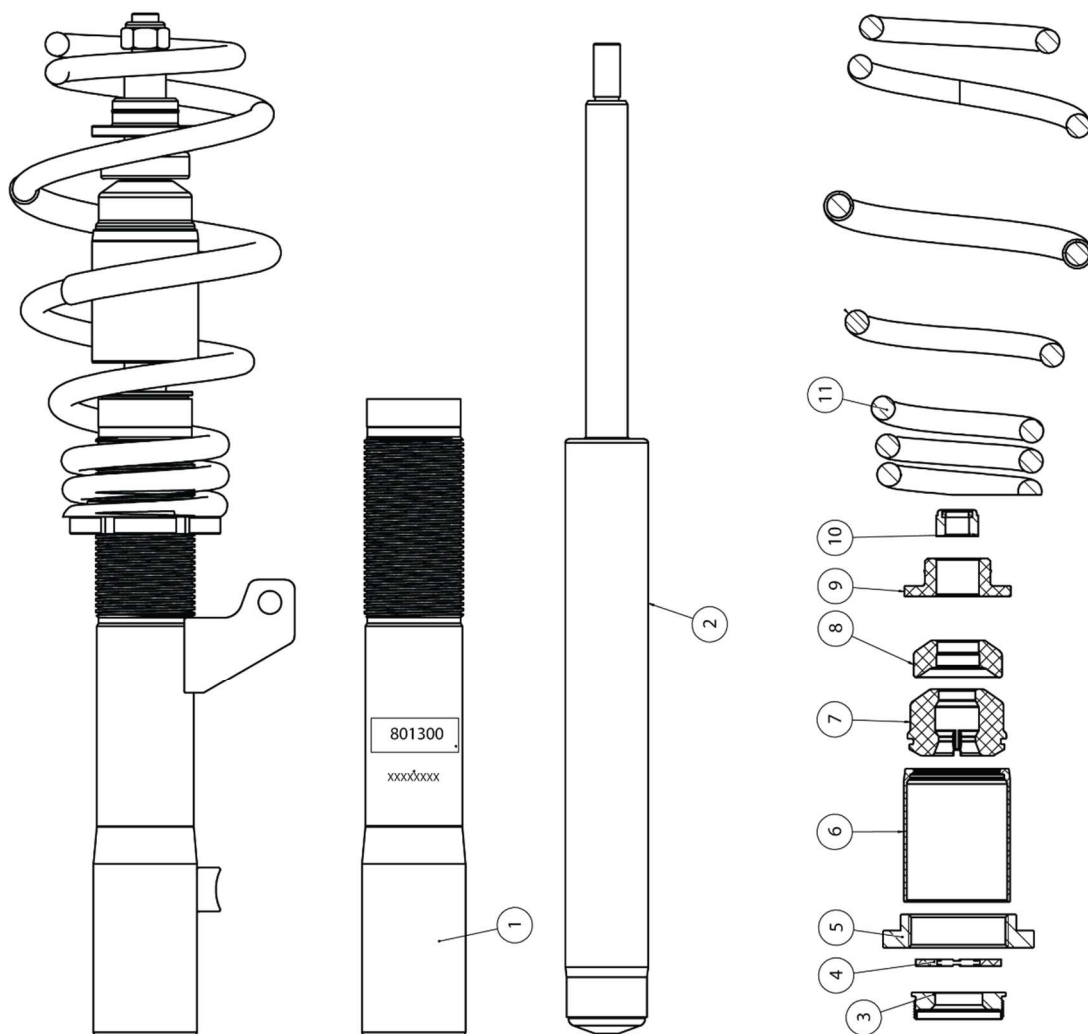

N.o	Part No.	Description	Quantity
1	801300	Strut Housing Front Assembly	1
2		Shock Absorber Insert	1
3		Housing top Nut	1
4		Vent Disc	1
5	710013	Adjustable Spring Collar	1
6		Plastic Dust Boot	1
7		Bump Stop	1
8		Travel Limiter	1
9		Upper Mount Insert	1
10		Nut	1
11	800730	Spring*	1

* varies depending on main part number

Figure 2

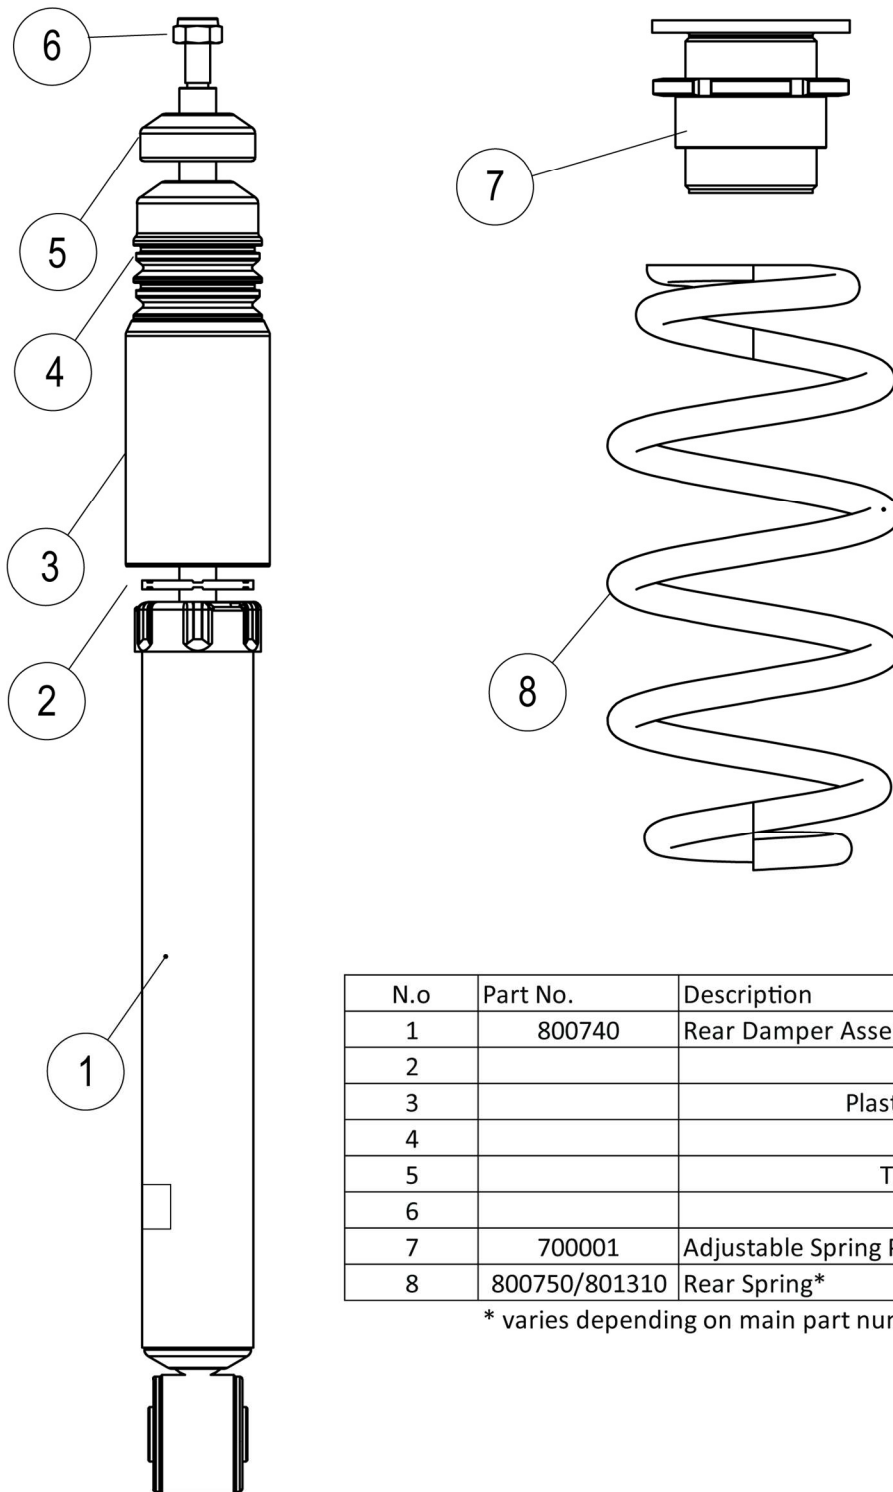

N.o	Part No.	Description	Quantity
1	800740	Rear Damper Assembly	1
2		Vent Disc	1
3		Plastic Dust Boot	1
4		Bump Stop	1
5		Travel Limiter	1
6		Nut	1
7	700001	Adjustable Spring Perch	1
8	800750/801310	Rear Spring*	1

* varies depending on main part number

Solo Werks Coilover Assembly and Installation – Front:

Work in the OEM Upper Bearings - Rotate the bearing a few times to break it in

- a. We have found that brand new or even existing bearings can get stuck as they have a very limited rotation when installed.***
- b. If they are stuck or too hard to move, they will not allow the assembly to rotate as it should and will create a spring bind that will produce a “boing” or “clang” sound of the springs recoiling.***

1. Assemble the coilover assembly with the OEM Strut Mount and bearing using the provided hardware as in the diagram Fig.1
 - a. Top nut should be torqued to 44 ft-lbs. (Fig. 1 #10)
 - b. Once assembled, we recommend starting the main perch at 25mm (1”) of thread remaining below the main perch/spring seat using the included spanner wrench – actual vehicle height will be set later in the process. (Fig.1 #5)

NOTE: Use of an anti-corrosion spray such as the Boeshield T-9 on the threads & main perch/spring seat at this point (Fig.1 #5) can make the adjustment process much easier and will add an extra layer of protection. Boeshield T-9 is available from your Solo Werks dealer.

2. Insert strut assembly into vehicle
 - a. Reinstall three upper strut mount bolts but do not tighten at this time.

NOTE: Before proceeding with the next step, inspect the inside of the Spindle for debris (rust/dirt etc). Also note the placement of the ridge that is built into the inner lower edge of the tube of the spindle. This is a locator for the shock tube, which must be inserted into the tube until it is stopped by this ridge. Only at this point is the shock properly seated in the Spindle.

3. With the Strut Spreader in place:
 - a. Insert strut assembly into Spindle housing with the metal bolt locator through the split.
 - b. Slide the strut assembly down until the bottom of the strut housing has bottomed out on the internal ridge in the spindle.
4. Replace lower spindle bolt through spindle housing and strut locator.
5. Fasten the self-locking nut onto the lower spindle bolt and tighten to:
 - a. 37 ft-lbs + ¼ turn (90°)
6. Reinstall OEM sway bar end links.
7. Repeat procedure on the other side.
8. Once vehicle is placed back on the ground under its own weight, Torque upper strut mount bolts to 11 ft-lbs.

9. **HEIGHT ADJUSTABLE PERCH SET SCREW MAXIMUM TORQUE IS 1-2Nm or 0.74-1.47 ft-lbs**

Original Suspension Removal- Rear:

SOLO WERKS TIP: *Disconnect Headlight level sensor from lower control arm before any other steps are taken. Disregard for this step could result in damage to sensor link.*

1. While Supporting lower trailing arm or beam in the compressed position (loaded as if it is on the ground)
 - a. Remove both lower shock bolts (passenger and driver's side shocks)
 - b. Slowly lower rear trailing arm on both sides to remove the pressure on the rear springs.
 - c. Remove rear springs.
 - i. This may require you to lower down the rear beam or control arm to allow more room to remove the springs.
2. Remove the two upper bolts from the upper shock mount on each side & remove rear shocks.
 - a. Remove OEM upper shock mount and dust boot assembly and discard OEM bumpstop and dust boot. A new bumpstop and dust boot is included in your kit.
 - b. Make note of orientation of OEM parts to be reinstalled later.

Solo Werks Coilover Assembly and Installation – Rear:

The Rear of this platform is a combination of a rear lowering spring & adjustable spring perch and specially matched shock absorber. The shock absorber does not need to be adjusted in any way to change the ride height.

SOLO WERKS TIP: *Just like the front struts, it is advisable to Prime the rear shocks as well. To purge the rear shocks: Refer to procedure on page 3.*


In the vertical position (as it would be installed in the vehicle):

1. Extend the shock rod to its full extent.
2. Compress until 1" of the chrome shock rod is visible outside of the shock housing.
3. Repeat 3-5 times or until the strokes feel consistent.

Solo Werks Coilover Assembly and Installation – Rear con't.

1. Remove both upper and lower factory spring pads from the vehicle and ensure that both areas are clean and free of any dirt or debris.
 - a. Reinstall lower spring pad.
2. The Solo-Werks rear spring perch is designed to be installed on top of the spring.
 - a. With the spring perch located above the spring it makes for easier access for future adjustments.
3. Place the spring into the lower control arm and clock the end of the wind into the indentation on the OEM lower spring pad.
 - a. This is the end with the closer winds of the spring – not the end with the spring wire ground flat.
4. Prepare the perch for installation.
 - a. Thread the adjustable perches down close to the aluminum base.
5. Place the perch into the top of the spring and align with chassis.
 - a. You may need to raise the rear axle to keep the assembly in place.
6. Repeat on the other side.
7. Assemble Solo-Werks rear shock (Fig.2) Torque shock shaft bolt (Fig.2 #6) to 18 ft-lbs.
8. Place shock into vehicle and reinstall two upper shock mount bolts and torque to 37 ft-lbs.
 - a. Do not torque lower shock bolts until vehicle is back on the ground and all weight is on vehicle.
 - b. Torque lower shock bolts to 130 ft-lbs.

Solo Werks Coilover Final Details – Heights & Working Ranges

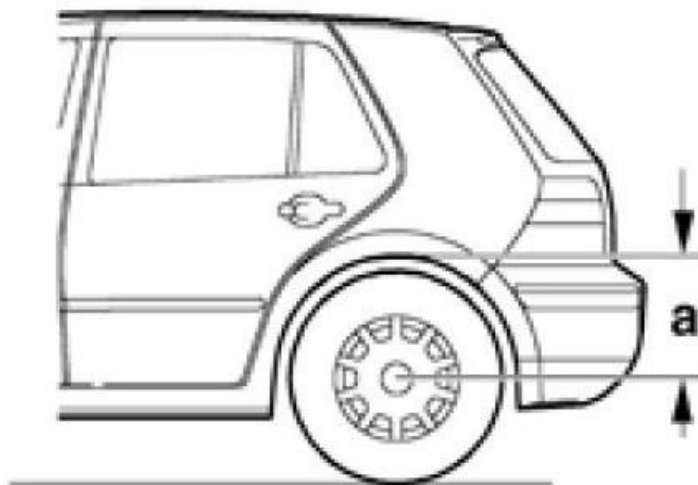


		Lowering Range			
		in Mm		in Inch	
Model	Year	Front	Rear	Front	Rear
VW Golf MK5/6	05'-13'	35-65	35-70	1.4" to 2.5"	1.4" to 2.75"

Front Measurement					
Max low mm	Max low Inch	Max high mm	Max high Inch	OEM mm	OEM Inch
315	12.5"	345	13.6"	380	15"

Rear Measurement					
Max low mm	Max low Inch	Max high mm	Max high Inch	OEM mm	OEM Inch
310	12.25"	345	13.6"	380	15"

- These measurements are in place to allow both front and rear dampers to operate properly and allow for ample shock travel.
- All measurements will be referenced from "center of wheel hub to bottom lip of fender" (see example figure "a")
- Using this system outside of this range can cause premature failure and is cause to void your manufacturer specified warranty.
- Helper springs are intended to keep preload on the main spring under full suspension extension, do not remove!

My Setup - Heights & Working Ranges

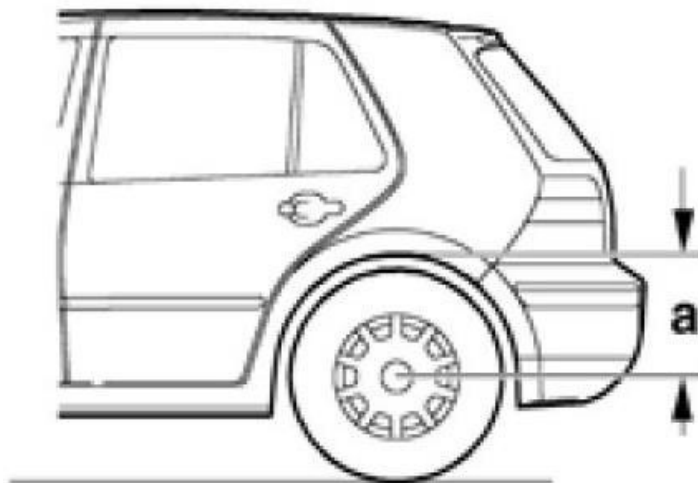

Use this page to record your setup heights for easy future reference.

Front Measurement						
Date	Max low mm	Max low Inch	Max high mm	Max high Inch	OEM mm	OEM Inch
Solo Spec	315	12.5"	345	13.6"	380	15"

Rear Measurement						
Date	Max low mm	Max low Inch	Max high mm	Max high Inch	OEM mm	OEM Inch
Solo Spec	310	12.25"	345	13.6"	380	15"